

Installation Instructions – PM191


IP66 Batten




Safety Notice:

1. Electrical installation should be done by registered electrician.
2. Disconnect the luminaire from supply and let it cool down, before replacement of the driver.
3. Never touch the lamp while luminaire is switched on.
4. In case of malfunction, disconnect luminaire from supply immediately. Repair should only be done by a registered electrician or official service agent.

Included

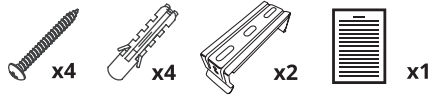






Not included

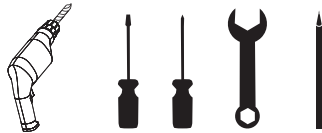


Model	Power (W)	Fixing hole centre (mm)
SLBN-212-S3-W	34	845
SLBN-215-S3-W	52	1135
SLBN-235-S3-W	56	1135

CCT Selection:


Please use the switch in the luminaire to select your preferred CCT.

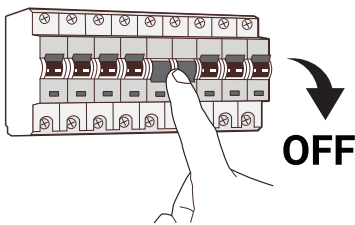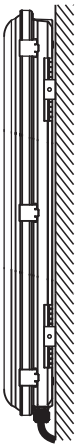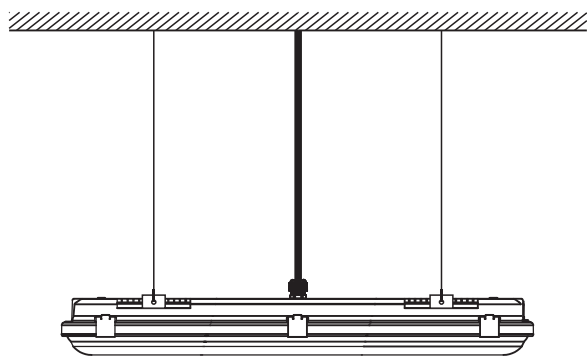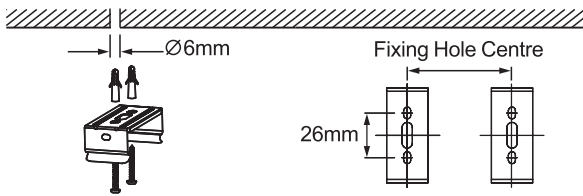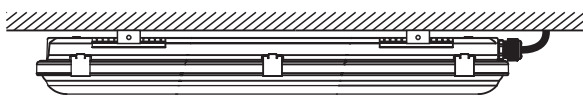


Turn off the switch

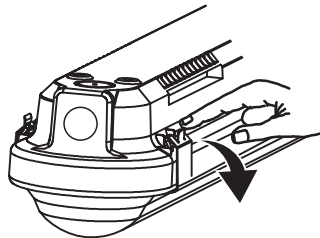




open the clips

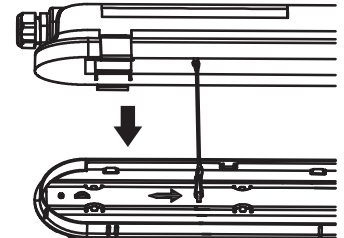


take out the diffuser

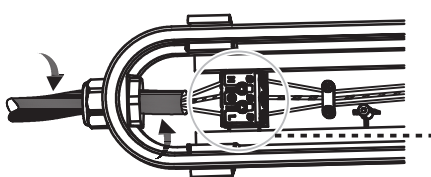


Connect the L to L, N to N, ⊕ to ⊕

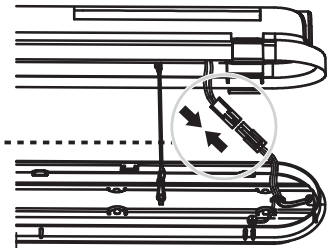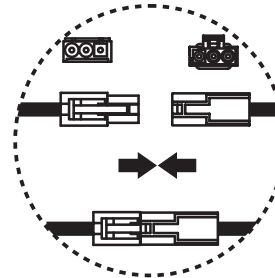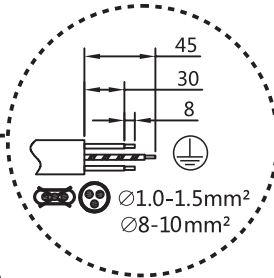


Connect the wires

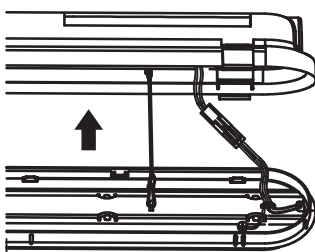

close the diffuser

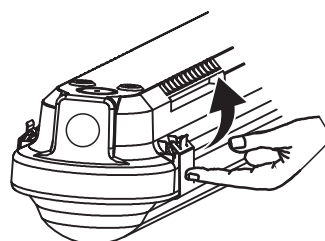

close the clips

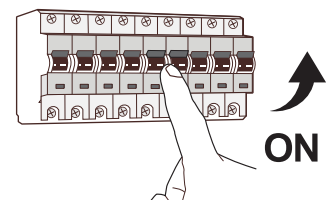

Turn on the switch